




SCHEDA RICAMBI ARTICOLO SPARE PARTS SPECIFICATIONS 522 RX

Edizione: a

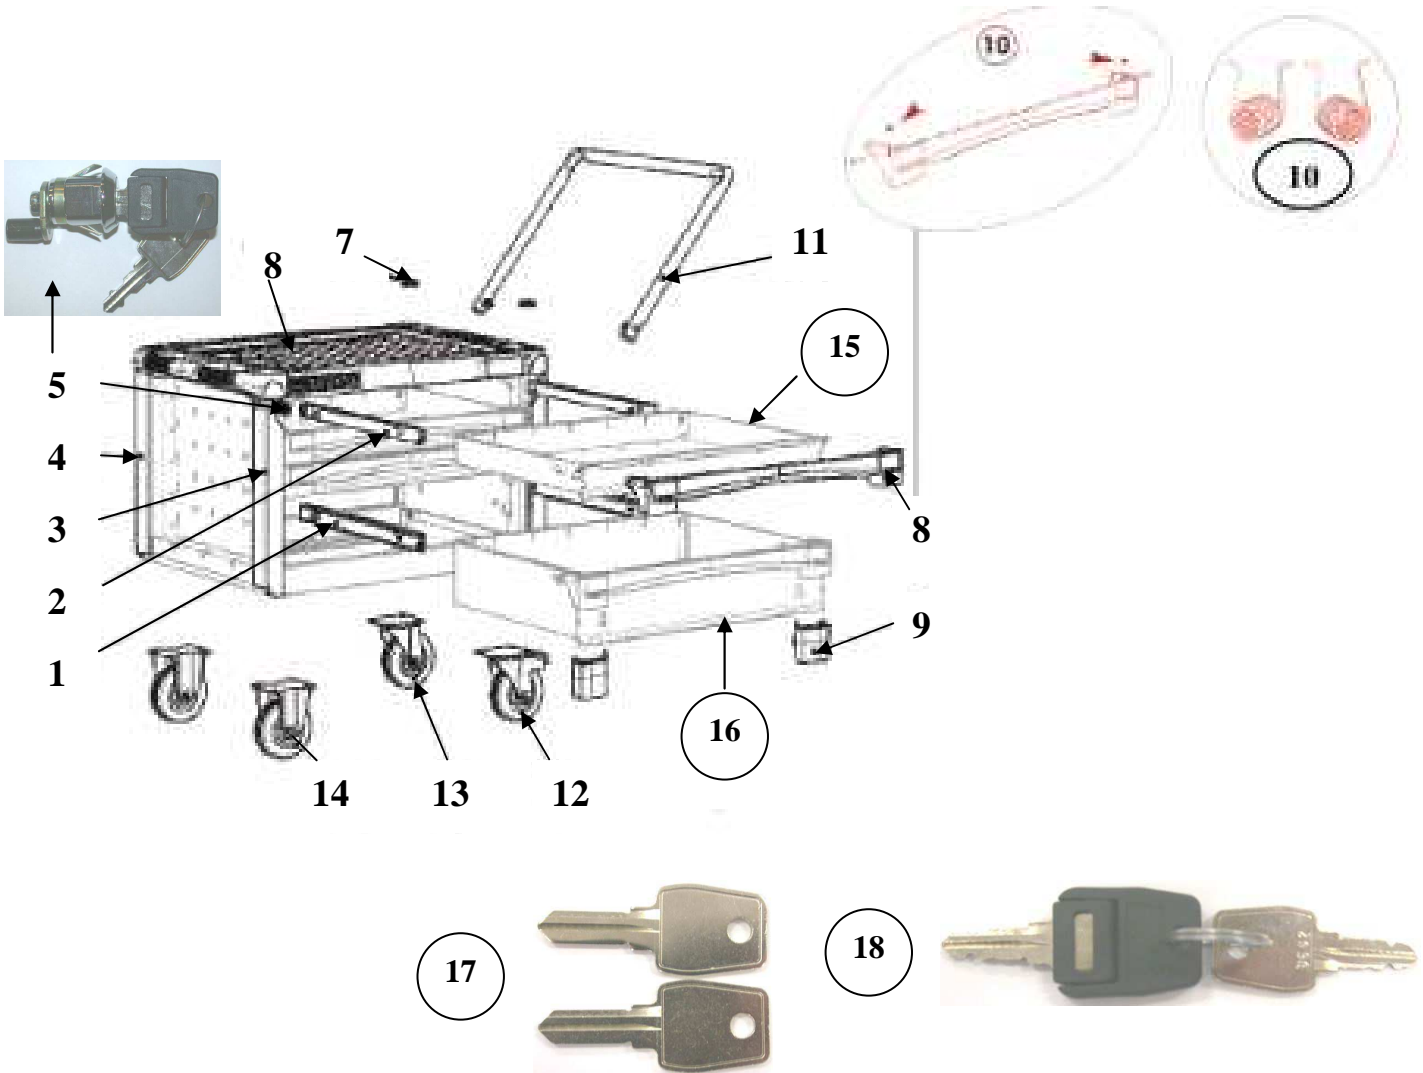

POSIZIONE POSITION	ARTICOLO	CODICE CODE	Quantità per confezione Quantity per box
1	522 RX3V - 522 RX4V - 522 RX4RV 522 RX3GV - 522 RX4GV - 522 RX4GRV	Q519483	2 (per / for H 35 mm)
2		Q519482	2 (per / for H 27 mm)
3		Q522491	1 (dx)
4		Q522492	1 (sx)
5		Q519070	1
6		Q519485	1
7		Q519486	1
8		Q519488	1
9		Q519489	2
10		Q519490	2
11	522 RX4RV - 522 RX4GRV	Q522490	1
12		Q519093	1
13		Q519092	1
14		Q519091	1
15	522 RX3V - 522 RX4V - 522 RX4RV	Q519493	1 (H 30 mm)
16		Q519494	1 (H 130 mm)
15	522 RX3GV - 522 RX4GV - 522 RX4GRV	Q519497	1 (H 30 mm)
16		Q519498	1 (H 130 mm)
17	522 RX3V - 522 RX4V - 522 RX4RV 522 RX3GV - 522 RX4GV - 522 RX4GRV	Q519069	2
18		Q519071	1 (N°serie / serial Number)